



BAZOOKA • FARMSTAR


Titan toolbar

Grease system

Program guide for GMA+

For models 2026 & newer

Keypad buttons

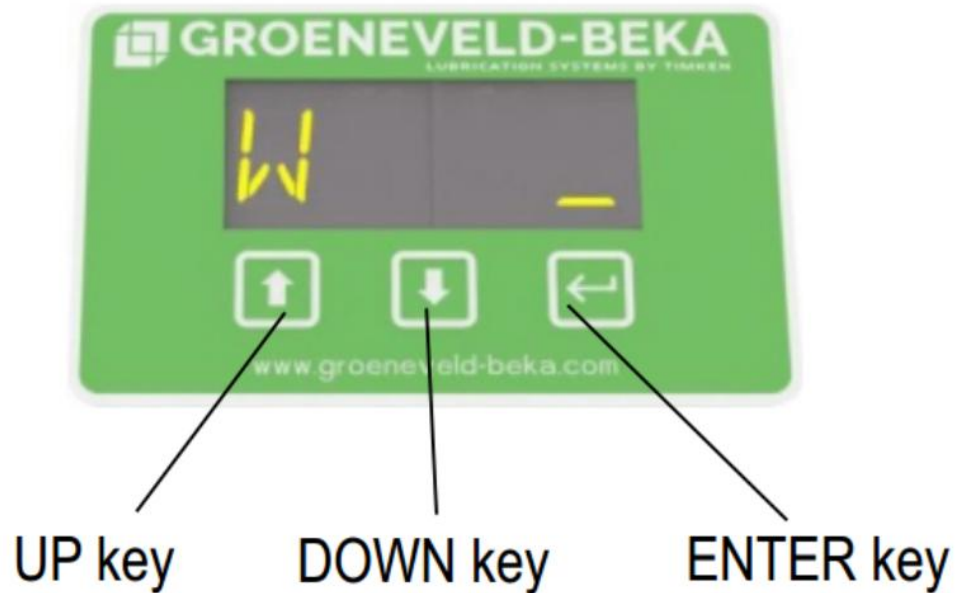

Abbreviatiion	Explanation
UP button	button on display 
DOWN button	button on display 
Enter button	button on display 

Setting time intervals



- **Power up the device**
- **You will see the screen on the left during startup**
- **You must wait 10 seconds after power up before being able to use the keypad**



- **If you see this error (E6: Out of grease) hit any key to put into machine back into working mode**



- **Press the two right buttons circled in Red and hold for 10 seconds**



- **You will see the text shown on the left UNLO blink for 10 seconds**



- After the device is unlocked you will see this working screen
- The Green dash will move clockwise around the screen while the W in the left remains visible
- The grease machine will be trying to distribute grease during this process



- **Press and hold the up arrow on the left side of the keypad**



- **Hold this button for 10 seconds**



- **You will see the text (GIV) after 10 seconds of holding the up arrow**
(If you do see “GIV”, then use up arrow until you see this text)
- **Select the enter arrow on the right side of the keypad when on GIV**





- You will start out at this screen
- Using the down arrow to scroll down until you reach a value of G0003





- Press the enter button to set the timing and return to the GIV screen
- Note: the smaller the number the more grease this will apply





- This indicates the grease machine will do one revolution every 3 minutes when in working mode
- Press the enter button to select the preferred setting





- Press the middle down arrow to get the exit screen



- Press the enter button on the right to return to the working screen





- **Timing is now set and the device is in working mode ready**



BAZOOKA • FARMSTAR

**ARE YOU READY TO DEDICATE YOURSELF
TO GREATNESS?**

Phone: (319) 653-5080 | (800) 775-7448

Office Hours: 8:00 a.m. – 5:00 p.m. Monday-Friday

Loading/Unloading Hours: 8:00 a.m. – 4:00 p.m. Monday-Friday

Location: 800 E. 7th Street Washington, IA 52353